

MPU-401 INTERFACE KIT MIF-IPC

MIF-IPC

MPU Interface Kit MIF-IPC is for setting up the MPU-401 with the IBM PC (5150)*, etc.

- Optional software is also necessary.

MIF-IPC: Interface Card × 1
Connection Cable × 1

*Appropriate Computer:



IBM PC (5150)

IBM XT (5160)

IBM AT (5170)

■ How to set up

1. Make sure that the computer is turned off.
2. Remove the top cover and securely attach the Interface Card to the Expansion Slot.
 - See the user's manual of the computer.
 - Be sure to tighten the screws at the upper part of the connector board of the Interface Card.
3. Connect the MPU-401 to the computer by using the Connection Cable. Here, be sure to tighten the screws on both ends of the connector.

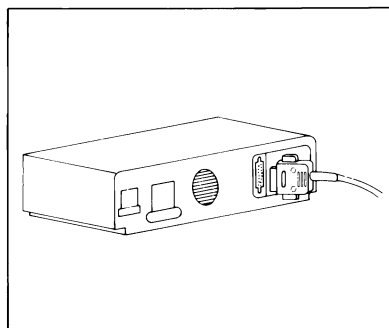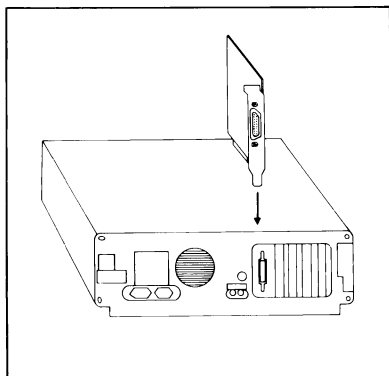

* IBM PC, IBM XT and IBM AT are trademarks of International Business Machines Corporation.

■ Circuit Diagram

